



Operating Instructions – Quick Start Guide

Operating Instructions

- Turn the cutlery polisher on so that it is vibrating & allow it to run for 20-30 minutes before use so that it can reach its operating temperature of 60°C
 - This can be monitored on the digital display or is indicated when the orange light on the front of the equipment goes out
- Cutlery must be warm, clean & wet – the cutlery polisher cannot polish dry cutlery
- Place cutlery into the entry chute, 8-12 pieces at a time, as soon as these are absorbed by the grain, place the next handful of cutlery into the chute
- Cutlery will emerge from the front of the machine 20-30 seconds later, dry, polished & sanitised & will be caught in the baskets
- Some granulate will spill into the baskets – pour this back into the polisher
- **IMPORTANT:** After use the machine must be left to run for 20-30 minutes to allow the granulate to dry out and recover after use

Changing the Granulate

- Unplug the cutlery polisher from the power supply
- Lift the equipment lid
- Remove used granulate from the polishing tank by hand or using a vacuum cleaner
- Pour one new, complete fill of granulate into the polishing tank via the entry chute & grids
- Close the equipment lid
- Re-plug the cutlery polisher to the power supply
- Turn the cutlery polisher back on & allow it to run for 20-30 minutes before use so that it can reach its operating temperature of 60°C
 - This can be monitored on the digital display or is indicated when the orange light on the front of the equipment goes out

*We suggest keeping a copy of these instructions next to the cutlery polisher for reference